

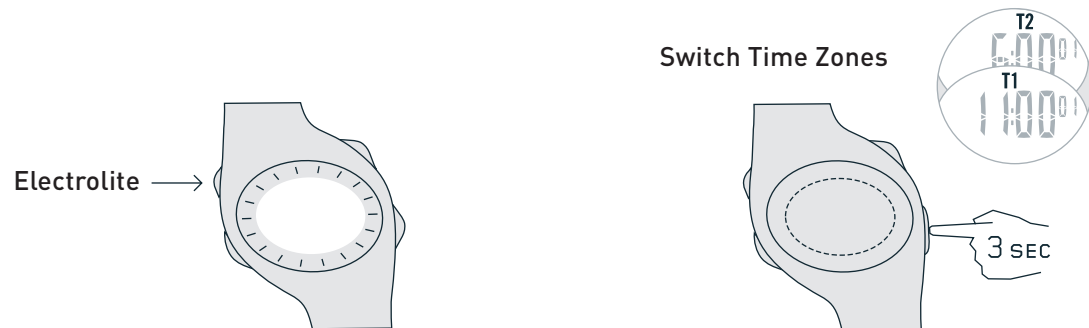




TIME

In TIME mode you can set time and calendar information and adjust your watch's display settings.

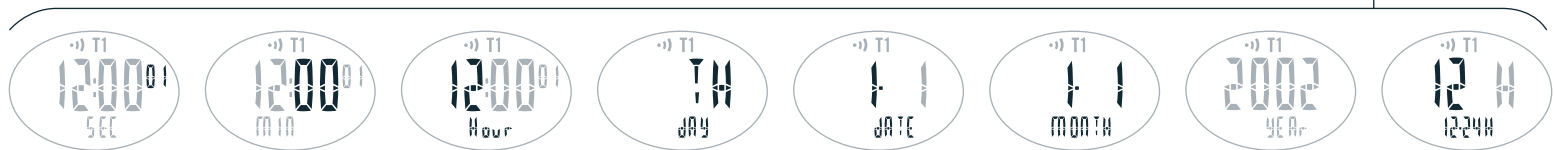

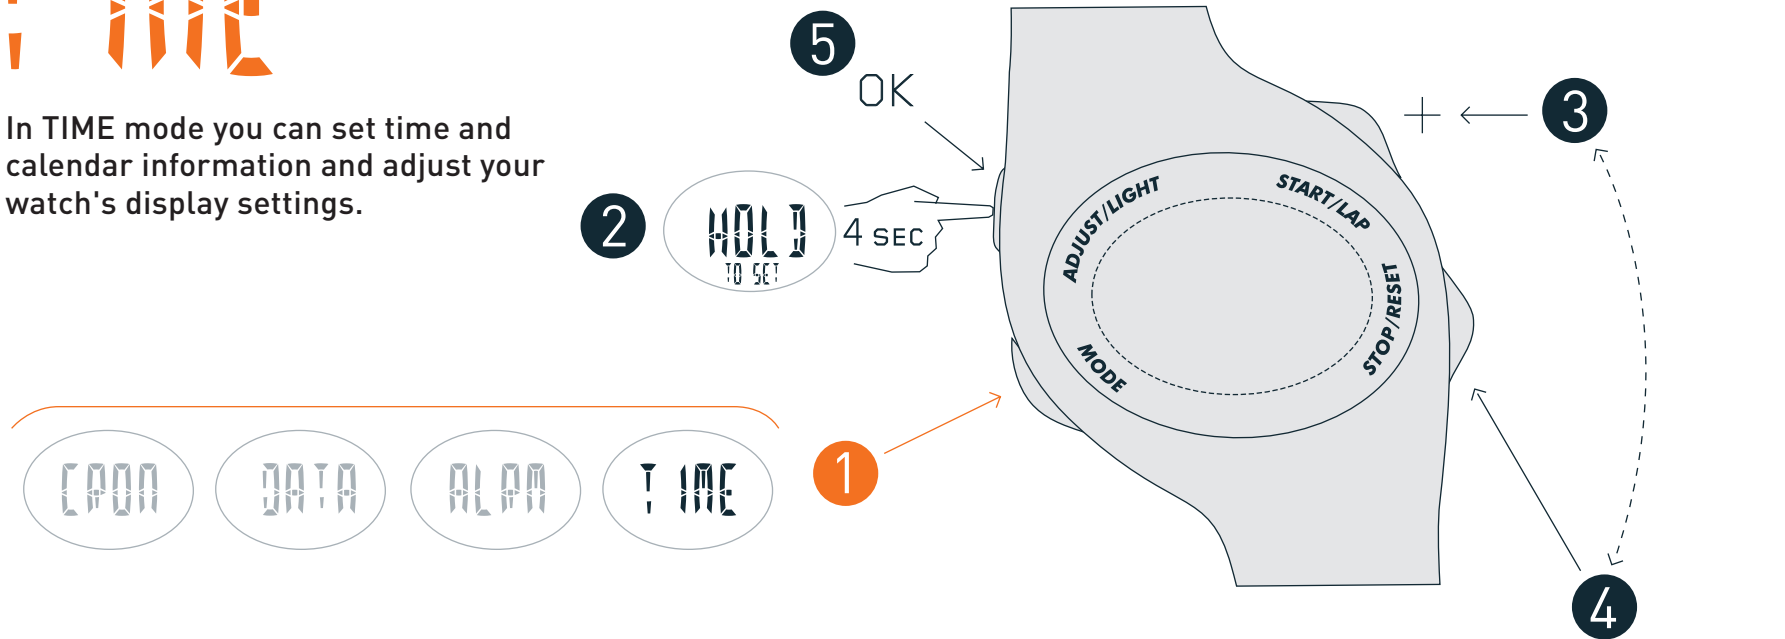


In CHRONOGRAPH mode you can capture lap, split and run times. Save your times for review in DATA mode.

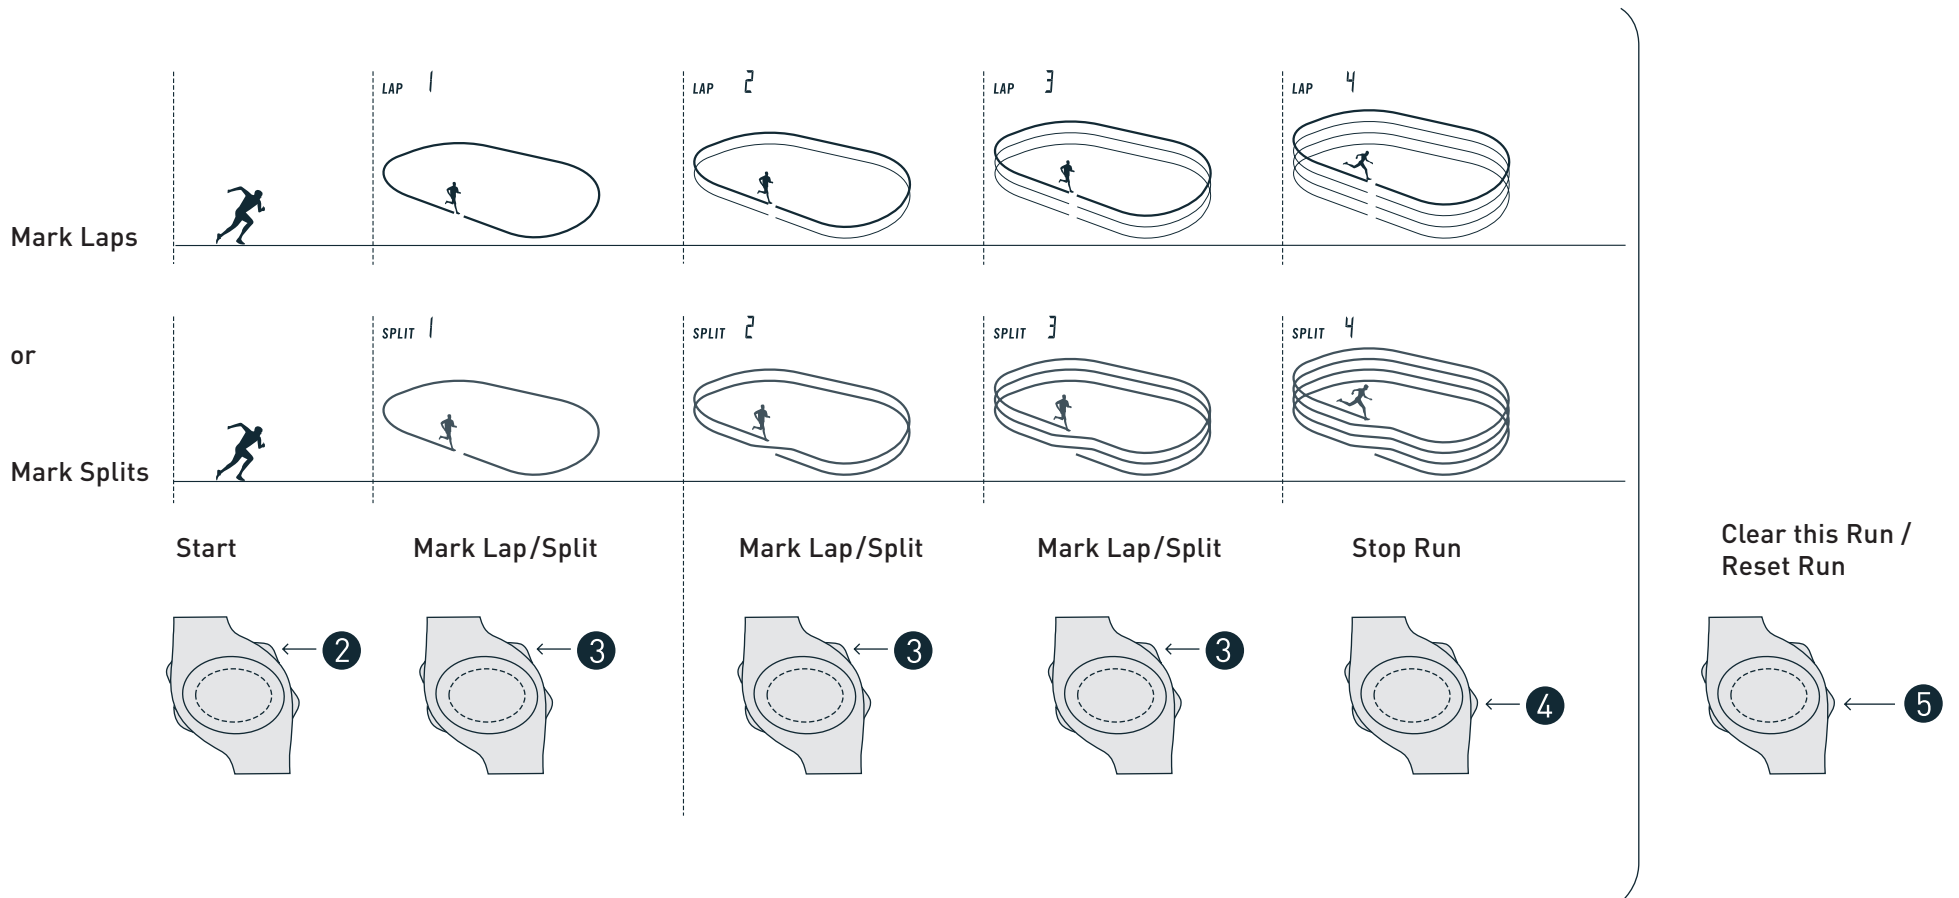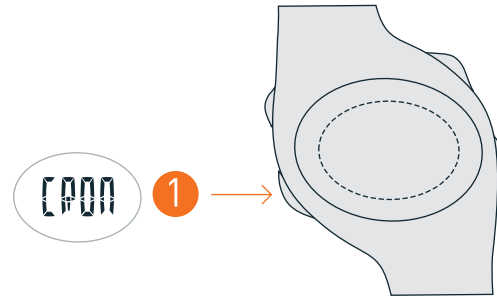

ALARM

In ALARM mode you can set 2 alarms within 2 time zones.
Press any button to stop alarm. Alarm will stop after 20 seconds.

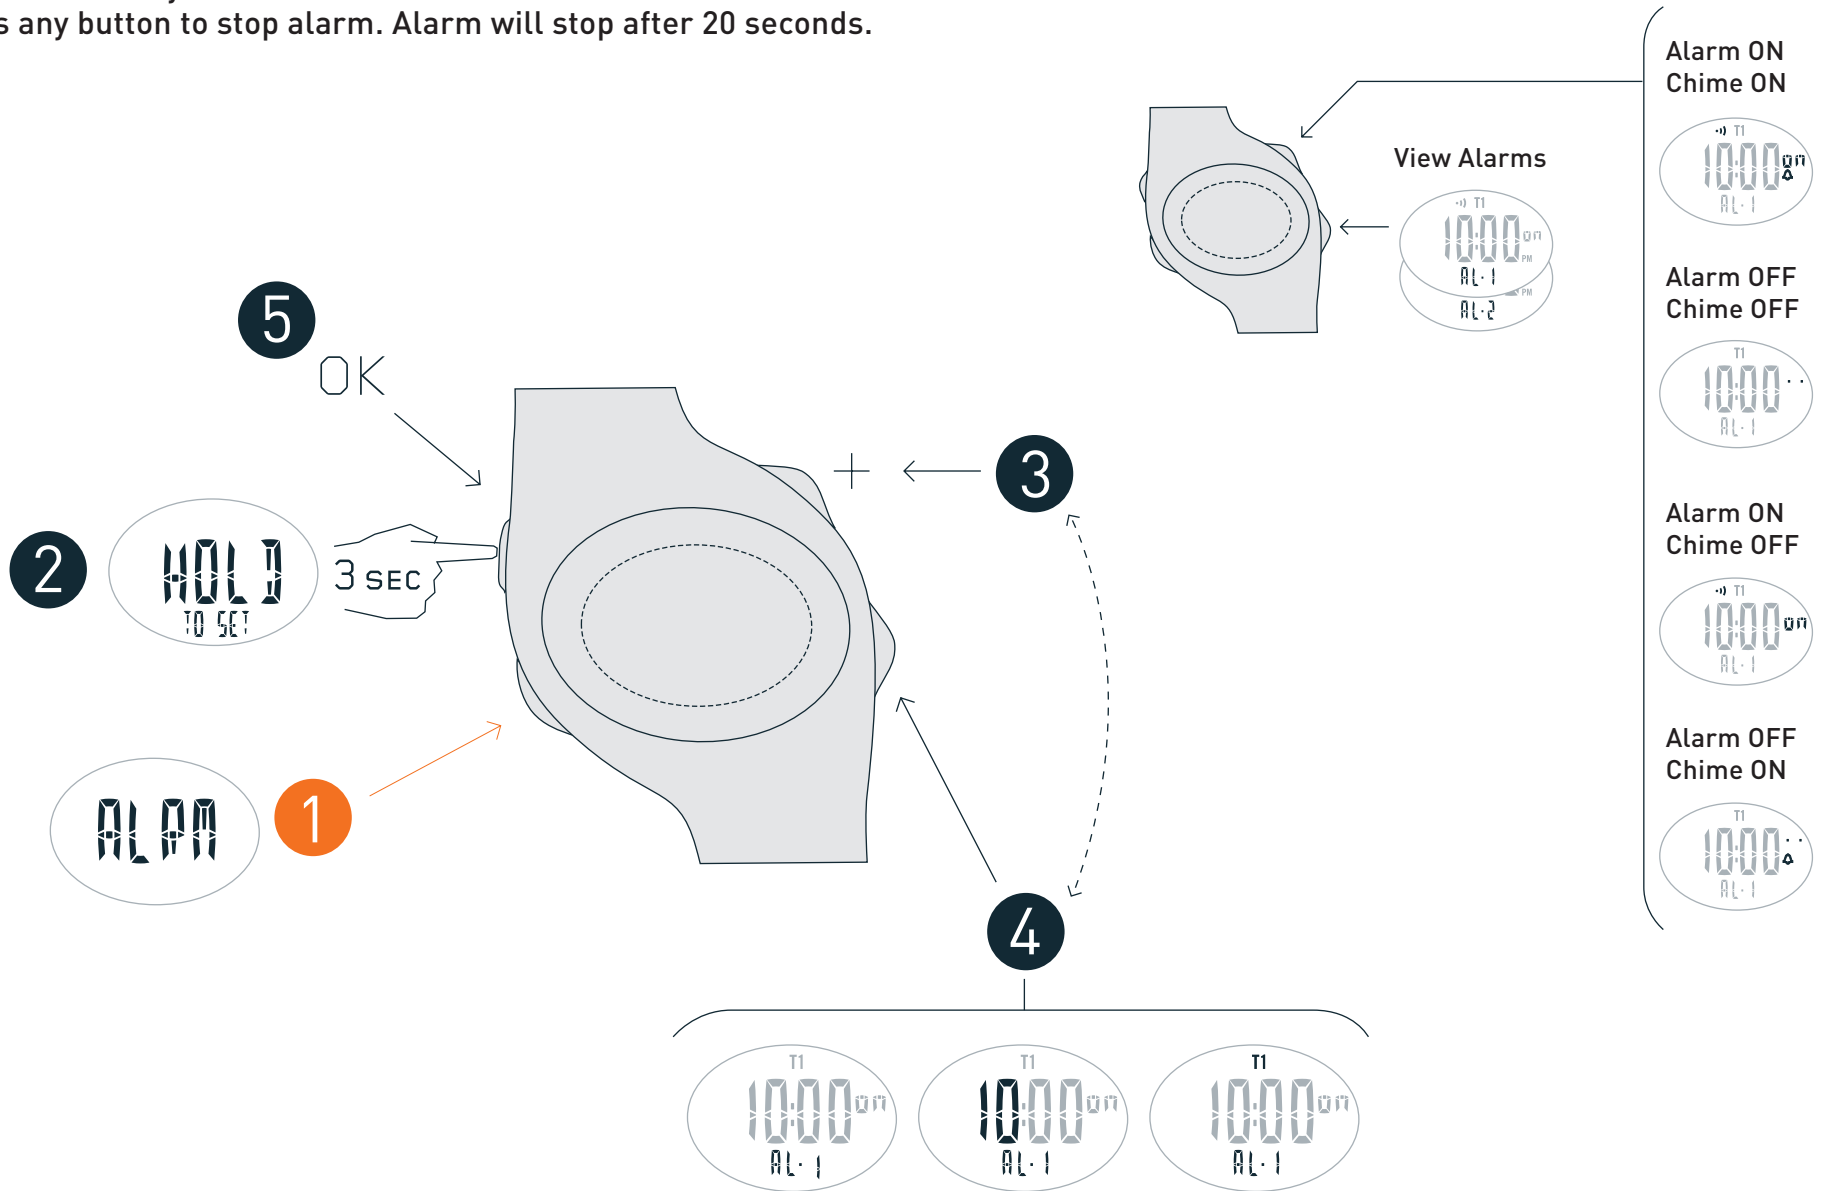

DATA

In DATA mode you can review lap, split and run times.
Record your times in CHRONOGRAPH mode.

